EYENIMAL

A LIVING ADVENTURE

DOG VIDEOCAM

Guide d'utilisation 3

User's guide..... 14

Manual de instrucciones 24

Gebrauchsanleitung 35

Manuale d'uso 46

Gebruiksaanwijzing 57

"FCC" DECLARATION OF CONFORMITY
FCC rules – PART 15
NUM'AXES
declares that
the equipment below:
EYENIMAL Dog Videocam
complies to all dispositions of the part 15 of the FCC rules

This device complies with part 15 of the FCC. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interferences that may cause undesired operation.

DECLARATION « CE » DE CONFORMITE
« EC » DECLARATION OF CONFORMITY

NUM'AXES
déclare que / declares that

la caméra / the camera
EYENIMAL Dog Videocam
satisfait à toutes les dispositions de la Directive N° 2004/108/CE du Conseil Européen
complies to all disposition of the European Council Directive Below N° 2004/108/EC

NUM'AXES
déclare que / declares that

la caméra / the camera
EYENIMAL Dog Videocam
Satisfait à la directive européenne **RoHS** (2002/95/CE).
complies to all disposition of the European Council Directive 2002/95/EC

EYENIMAL® est une marque déposée par la société NUM'AXES (Société Anonyme à Directoire et Conseil de Surveillance) – France

EYENIMAL® is a trademark of NUM'AXES company (Société Anonyme à Directoire et Conseil de Surveillance) – France

NUM'AXES / EYENIMAL
4 rue Béranger
75003 Paris
FRANCE
Tel : + (33) (0)142747866

User's guide

Before using your pet cam, please read the instructions in this guide carefully and keep it for future reference.

Index

Technical specifications 15
Contents and description of the camera Dog Videocam 16
First use 17
Charge of the battery 17
Fitting the video cam 17
Recording continuously 19
Recording when movement is detected 19
Recording when the animal is stationary 19
Audio recordings 19
Recording sessions 20
How to view / delete / download videos 20
Change date and time videos 20
Share your videos 21
Cautions for use 21
Troubleshooting 21
Warranty 21
Warranty conditions 23
Register your product 23
Disposing or recycling of your device at the end of its life 23

- **Technical specifications**

Product Size	Length 84mm / diameter 26mm
Physical weight (including bracket)	63g
USB	2.0 (high speed)
Power supply	Embedded 460mAh Li-polymer Battery
Working times	Up to 150 minutes
Power Adaptor	5V DC/500mAh
Power Consumption	<0.7W
Internal Memory	Built in 4GB memory
External Memory	Class4 Mini SD Card (supports 2GB up to 8GB)
Resolution	736x480
Video Format	AVI
Recording Speed	24 frames per second
Focus Range	80cm
Recording Angles	57 degree
Image sensor	CMOS
Working temp	-10°C +50 °C
Storage temp	-20°C +60 °C
Player	Quicktime, kmplayer. windows media player,Realplayer
Operating System	Windows 2000, XP, Vista, 7 Mac OS 10.x

- **Contents and description of the camera Dog Videocam**

  - **Contents**

- 1 EYENIMAL Pet Cam
- 1 USB cable
- This user's guide
- a video cam mount
- a perforated metal cap
- an EYENIMAL® cap

  - **Description**

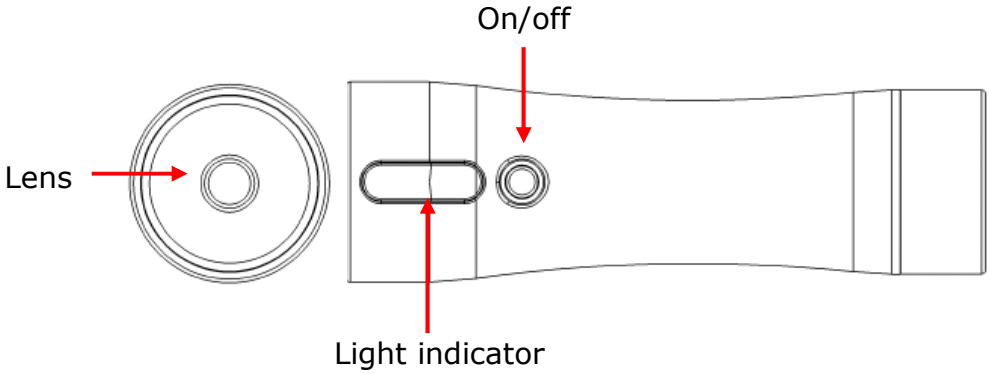

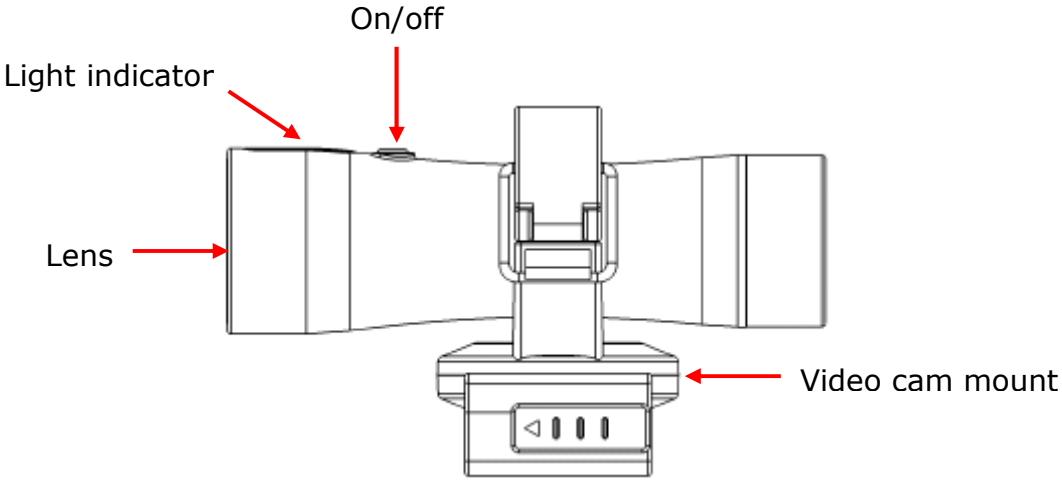

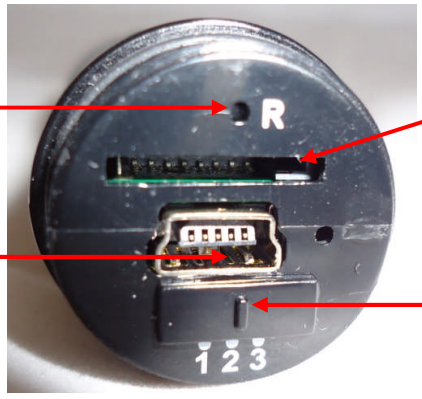

- **First use**

It is necessary to fully charge the battery of your video cam before the first use (duration of the 1st charge: 8 hours).

- **Charge of the battery**

To charge your product, **the video cam must be necessarily turned off**.

To charge your product, proceed in the following way:
- Unscrew the metal cap to the rear of the video cam.

Diagram 1
USB port to charge the battery

- Plug the line cord to the receptacle at the bottom of the video cam.
- Then plug the line cord of the computer.
- **When the battery is charging, the indicator light turns red** (the charge of the product takes approximately two and half hours).
- Once the battery is fully charged, the red indicator light goes out to indicate that your product is completely recharged.
- Disconnect the video cam from the line cord.
- Disconnect the line cord from the computer.
- Screw the metal cap to the rear of the video cam back on.

- **Fitting the video cam**

1/ Fit the video cam on its mount

Proceed as follows to fit the video cam on its mount:
- Open the video cam mount clamp.
- Position the video cam in the clamp.
- Close the clamp.

Diagram 2
Fitting the video cam in the clamp

2/ Attach the video cam mount to a strap or the EYENIMAL® cap

Proceed as follows to attach the video cam mount **to your dog's collar**:

- Open the mount by pushing the button in the direction shown by the arrow.

Diagram 3
Opening of the mount

- Lay the strap down flat in the mount.

Diagram 4
Laying of the strap in the mount

- Re-close the mount by pushing the button in the opposite direction.

Diagram 5
Closing of the mount

The video cam mount is specially designed for use with standard straps with a width of 25 mm and a thickness of 2.4 mm.

We recommend that you use a polyurethane strap to avoid the collar rotating around the dog's neck.

You can purchase straps at any time from NUM'AXES or your distributor.

Proceed as follows to attach the video cam mount **to the EYENIMAL® cap**:

- Open the mount by pushing the button in the direction shown by the arrow.
- Fit the mount into the notch on the right side of the cap.
- Re-close the mount by pushing the button in the opposite direction.

Diagram 6
Fitting the video cam to the EYENIMAL® cap

3/ Angle the video cam as required

When the video cam is fitted on the dog's neck or on the EYENIMAL® cap, remember to adjust the viewing angle by rotating the video cam mount upwards or downwards.

The indicator light on the top of the video cam must be directed upwards.

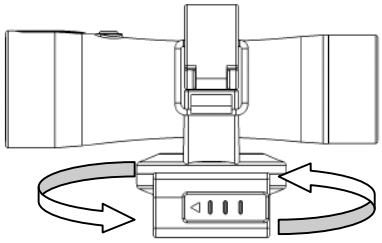

Diagram 7
360° rotating mount to adjust viewing angle

Diagram 8
Optimal viewing angle for the video cam fitted on the collar

Diagram 9
Optimal viewing angle for the video cam fitted on the cap

- **Recording continuously**

This mode can be used to film continuously.

To select this mode, set the mode selector to position 1 (see diagrams § Description).

To start recording, hold the on/off button on the top of the video cam in for 5 seconds. The indicator light will flash blue: the video cam is recording.

To stop the recording/turn off the video cam, hold the on/off button in for 5 seconds.

- **Recording when movement is detected**

This mode can be used to only film when your dog is moving. When the video cam comes to a standstill, the recording stops automatically.

To select this mode, set the mode selector to position 2 (see diagrams § Description).

To start recording, hold the on/off button on the top of the video cam in for 5 seconds. The indicator light will flash blue: the video cam is recording.

To stop the recording/turn off the video cam, hold the on/off button in for 5 seconds.

- **Recording when the animal is stationary**

This mode can be used to only film when your dog is still. Recording stops automatically when the video cam moves.

To select this mode, set the mode selector to position 3 (see diagrams § Description).

To start recording, hold the on/off button on the top of the video cam in for 5 seconds. The indicator light will flash blue: the video cam is recording.

To stop the recording/turn off the video cam, hold the on/off button in for 5 seconds.

- **Audio recordings**

To record sound while the video cam is filming, replace the metal cap on the rear of the video cam with the perforated metal cap supplied as an accessory for your product.

Fig. 10
Bouchon étanche à l'immersion

Fig. 11
Bouchon perforé pour enregistrer les sons

The perforated metal cap can be used to record sound while the video cam is filming, but the video cam is not waterproof in this case. The video cam will be irreversibly damaged if submerged in water and the warranty will be void.

- **Recording sessions**

Videos are divided into sessions of 30 min.

When the memory is full, the video cam turns itself off automatically. It is then necessary to delete all or any of the sessions to be able to free memory to record again.

If battery charge is low, the blue indicator light will flash rapidly.

The video cam has a flash memory of 4 Gb. You can increase storage space by adding a mini SD card (up to 8 Gb) in the location provided for this purpose (see diagrams § Description).

- Battery autonomy when recording continuously: up to 2:30.
- Battery autonomy in "movement" mode: up to 3:10.
- Battery autonomy in "stationary" mode: up to 3:10.

The above periods are valid for optimal conditions and may vary with temperature, light and movement.

- **How to view/delete/download videos**

Connect the video cam to your computer using the cable provided. Your computer should automatically recognize the video cam. You can view, delete or transfer the recordings using the media player of your choice.

IMPORTANT: In some instances, computers may not detect the video cam on the 1st try. In that case, disconnect the USB cable from your computer and repeat the steps.

- **Change date and time videos**

Following are operation steps for changing the date and time for videos.

1. Connect he video cam with computer or Laptop, then you can find a new added "Disk(X)" symbol in "my computer".

2. Open the directory of "Disk(X)", then create a new text document by right clicking > New > Text file. It is important that the file is created in the "Disk(X)" folder and not in the "Video" folder.

3. Rename the new text document to "setdate".

4. Open the new Text document input the local time according to the following set form.
   For example: 12:09:01, 03, Jan, 2012 must be set like this: 20120103120901

5. Now save the text document and unplug the USB cable. Then record a new video and re connect the video cam to the computer or laptop.
   Check if the video displays the correct time, if not, please set time again.

- **Share your videos**

Share your favorite videos of your cat or your dog with thousands of people all over the world. Edit your video and post it on www.eyenimal.com

***Image rights and privacy*:**
The online publishing of images and videos without the prior written consent of the people appearing in them and who can be identified is strictly prohibited. The publisher of the image or video takes full liability for any complaints that may incurs.

- **Cautions for use**

  - Do not open or dismantle the camera. **It will void the warranty.**
  - If the video cam is not used for an extended period, make sure it is stored in a cool location, preferably completely discharged.
  - Do not throw your camera away with household trash (See § Disposing or recycling of your device at the end of its life).
  - Keep the camera out of reach of children. To use the camera, an adult supervision is strongly recommended.
  - We recommend you not to use your camera below 0°C. The battery life will be reduced slightly in lower temperatures.

- **Troubleshooting**

Should your video cam stop working or develop an issue, first, read this user's guide. Then, **check the battery and that you are using the product correctly. Check the memory card is not full.**

In case of issues, proceed to "reset" the video cam by pressing the « Reset » button and holding it for 5 seconds (See diagrams § Description).

You can also **rapidly reformat** the video cam memory as follows. Connect the video cam to the computer. Go to the "workstation" or "computer" menu, right click on the "mobile disk (X)" icon and select "format". Check the "quick formatting" box to start formatting.

If the problem persists, contact your distributor or check out www.eyenimal.com for customer care.

Depending on the extent of the problem, you may have to return your product for service and repair.

- **Warranty**

EYENIMAL warranty the product against all production defects for 1 year after purchase. All postage and packing charges will be the purchaser's sole responsibility.

- **Warranty conditions**

1. The WARRANTY will be effective only with a proof of purchase (invoice or sales receipt). The warranty is exclusive to the original purchaser.
2. This warranty does not cover the following:
    - changing the battery,
    - direct or indirect problems incurred when sending the product back to the distributor or to EYENIMAL,
    - damage to the product caused by:
        - negligence or incorrect use (ex: bites, breakage, cracking),
        - misuse from not following directions
        - repairs performed by unauthorized persons.
    - loss or theft.
3. If the product is found to be defective, EYENIMAL will either decide to repair or to replace it.
4. No claim may be made against EYENIMAL, particularly in relation to incorrect use or breakdown.
5. EYENIMAL reserves the right to modify the characteristics of its products with a view to making technical improvements or to complying with new regulations.
6. The information contained in this guide may be subject to amendment without prior notice.
7. Photos and drawings are not contractual.

- **Register your product**

Your product can be registered on our website at www.eyenimal.com

- **Disposing or recycling of your device at the end of its life**

The pictogram which appears on your product means that this device cannot be disposed of with common household items.
You have to bring the device to a collection location suitable for treatment, development, recycling of electronic waste or bring it back to your distributor.

EYENIMAL
A LIVING ADVENTURE

contact@eyenimal.com
www.eyenimal.com

L'éco-participation,
un geste citoyen pour notre environnement
Montant hors éco-participation + Éco-participation = Prix de l'appareil
À partir du 15 novembre 2006, lorsque vous achetez un nouvel appareil électrique ou électronique, en payant une «éco-participation», vous participez au financement de la collecte et du recyclage d'un ancien équipement équivalent.
Ne jetez plus vos anciens appareils, rapportez-les dans un point de collecte
Point de collecte
Éco-systèmes

ecma™
www.ecma.eu.com
FOR PET PROTECTION

PARTENAIRE
Éco-systèmes

EYENIMAL
A LIVING ADVENTURE

contact@eyenimal.com
www.eyenimal.com

Indice A